


F&M CUSTOM COWLINGS

www.CustomCowlings.com

INSTALL INSTRUCTIONS FOR 496 MAG / MAG HO WITH CMI HEADERS



1. Remove stock cowlings with torx wrench provided.

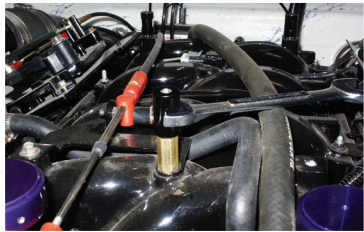

2. Install short spacers to motor manifold with 5/8" wrench.



3. Install spacer assembly with o-ring to keep from losing spacers in engine compartment.

Note: Thread or roll o-ring as close to spacer as possible.



4. Install cowlings on motor with hex wrench provided.

5. Stainless steel cowlings only: Peel off PVC, clean edges with lacquer thinner and wax.