

F&M CUSTOM COWLINGS


www.CustomCowlings.com

INSTALL INSTRUCTIONS FOR CAPS



1. Engine Oil:

Line up set screws with low point in cap, snap in and tighten set screws.

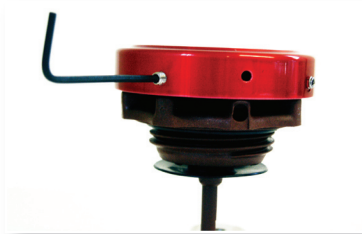

2. Power steering:

Line up breather hole, slip on and tighten set screws.



3. Drive Oil:

Line up low point in cap, tighten set screws.



4. Coolant Fill:

Line up low point in cap, tighten set screws.