

F&M CUSTOM COWLINGS

www.CustomCowlings.com

INSTALL INSTRUCTIONS FOR VOLVO 8.1



1. Remove stock cover with 8mm socket.



2. Remove Cover bracket with 10mm wrench.




3. Install short stand-off in the front center hole of manifold using a 5/8" wrench.



4. Install spacer assembly with o-ring to keep from losing spacers in engine compartment.

Note: Thread or roll o-ring as close to spacer as possible.

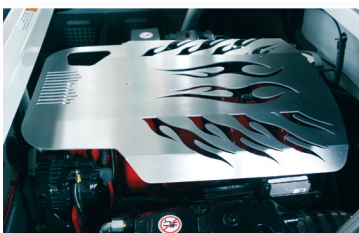

5. Install cowling on motor with hex wrench provided.

6. Stainless cowling only:
Peel off PVC, clean edges with lacquer thinner and wax.