


# F&M CUSTOM COWLINGS

www.CustomCowlings.com

## INSTALL INSTRUCTIONS FOR 496 MAG / MAG HO WITH CMI HEADERS



1. Remove stock cowl with torx wrench provided.

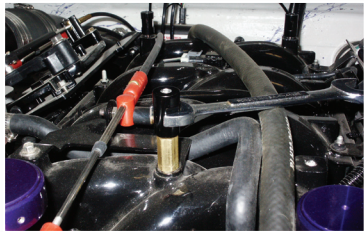

2. Install short spacers to motor manifold with 5/8" wrench.



3. Install spacer assembly with o-ring to keep from losing spacers in engine compartment.

*Note: Thread or roll o-ring as close to spacer as possible.*



4. Install cowl on motor with hex wrench provided.

5. Stainless steel cowlings only: Peel off PVC, clean edges with lacquer thinner and wax.